INSTALLATION


BEFORE THE INSTALLATION

This models can be used only if connec-ted with false ceiling.

external motors produced by the same After having commanufacturer.

PANELS OPENING

It is possible to open the steel panels, which cover the grease filters, by slightly pulling on a side of the panel itself, as shown in Fig. 1.

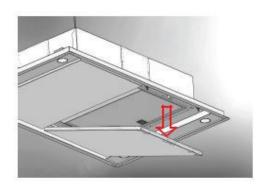

To achieve the complete opening of panels, you need to release the safety chains, by using the appropriate spring catches.

For proper working, it is recommended to install the appliance at a distance of 2000

- 2100 mm from the floor.

Before starting the appliance installation, please check that all components are not damaged, in such a case contact your retailer and do not carry out installation.

INSTALLATION

Fit a false ceiling with an opening that has the following dimensions:

SUT950: 1465x965 mm with a minimum

distance of 330 mm between the ceiling and the


false ceiling;

SUT951: 1065x665 mm with a minimum


distance of 330 mm between the ceiling and the false ceiling.

After having chosen the most suitable po-sition, prepare the ducting: an air outlet connection piece, with a diameter of 150 mm to be installed in the side selected, is provided with the appliance.


Leave any unused exhaust outlets closed. As shown in fig.2.

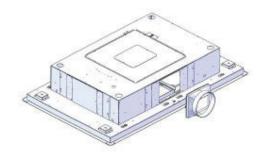


Draw the outline of the hole to house the ceiling-mounted hood on the solid ceiling as shown in Fig. 3 according to the model chosen.

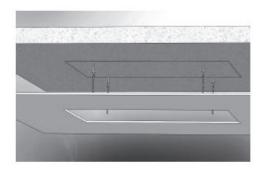


Make 4 holes in the ceiling according to the dimensions as shown in Fig. 4, place the metric plugs provided in the holes.

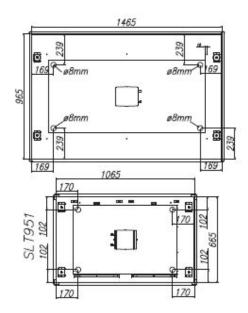






in case of a larger gap between the hood and the ceiling, you need to use longer threaded bars.

Connect the power supply into the metal box placed inside the hood as shown in fig. 7.

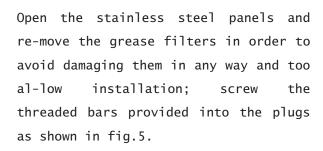

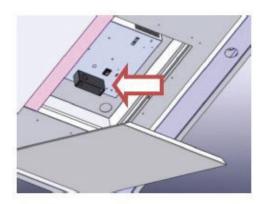

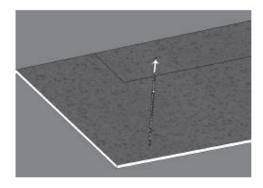

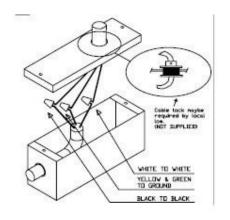

The threaded bars are 250 mm long and serve to install the ceiling-mounted hood at a distance from the solid cei-ling of between 270 mm and 370 mm as shown in fig. 6.

and connect the air outlet pipe.

Do not fix the ducting to the outlet

with screws - use DUCT TAPE;

place the ceiling-mounted hood into the niche, the outer edge of the hood needs to be perfectly flush with the false ceiling. Insert the plates and nuts provided on the threaded bars, making sure to tighten them securely, as shown in Fig. 8; refit the grease filters and filter cover panels.

