



6 EASY STEPS FOR MOUNTING

1 Drill using installation template.

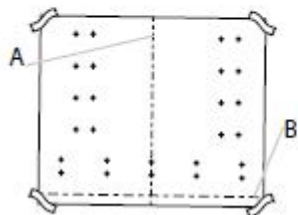


A. Centerline
B. Baseline

2 Fix support Brackets.

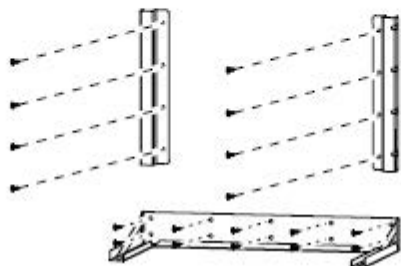


4 Screw the depth crossbar to the insert hood.

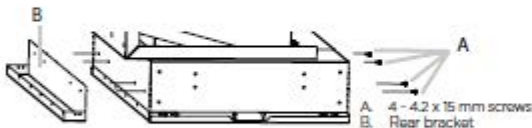


A. 4 - 4.2 x 15 mm screws
B. Rear bracket

5 Slip connect the Shell to the upper brackets thru the eyelets.

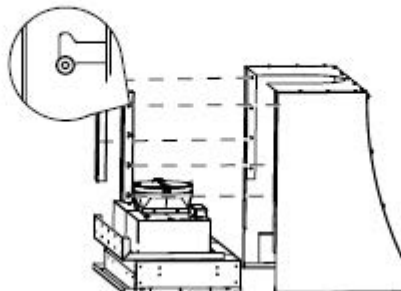

3 Secure the insert hood to the lower support.

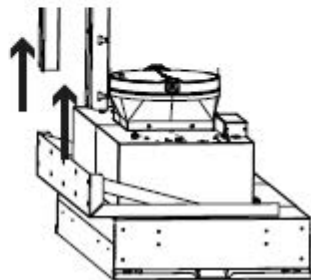

6 Screw the Insert hood to the Shell.

